SDM630-Modbus V2

DIN Rail Smart Meter for Single and Three Phase Electrical Systems



- Measures kWh Kvarh, KW, Kvar, KVA, P, F, PF, Hz, dmd, V, A, etc.
- Bi-directional measurement IMP & EXP
- Two pulse outputs
- RS485 Modbus
- Din rail mounting 35mm
- 100A direct connection
- Better than Class 1 / B accuracy

USER MANUAL

2020 V1.4

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

Introduction

The SDM630-Modbus V2 measures and displays the characteristics of single phase two wires (1p2w), three phase three wires (3p3w,) and three phase four wires(3p4w) supplies, including voltage, frequency, current, power ,active and reactive energy, imported or exported. Energy is measured in terms of kWh, kVArh. Maximum demand current can be measured over preset periods of up to 60 minutes. In order to measure energy, the unit requires voltage and current inputs in addition to the supply required to power the product.

SDM630-Modbus V2 supports Max. 100A direct connection, saves the cost and avoid the trouble to connect external CTs, giving the unit a cost-effective and easy operation. Built-in interfaces provides pulse and RS485 Modbus RTU outputs. Configuration is password protected.

Unit Characteristics

The Unit can measure and display:

- Line voltage and THD% (total harmonic distortion) of all phases
- Line Frequency
- Currents, Current demands and current THD% of all phases
- Power, maximum power demand and power factor
- Active energy imported and exported
- Reactive energy imported and exported

The unit has password-protected set-up screens for:

- Changing password
- Supply system selection 1p2w, 3p3w,3p4w
- Demand Interval Time(DIT)
- Reset for demand measurements
- Pulse output duration

Two pulse outputs indicates real-time energy measurement. An RS485 output allows remote monitoring from another display or a computer.

RS485 Serial – Modbus RTU

This uses an RS485 serial port with Modbus RTU protocol to provide a means of remotely monitoring and controlling the Unit.

Set-up screens are provided for setting up the RS485 port.

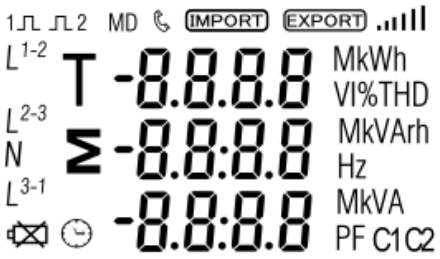
Pulse Output

This provides two pulse outputs that clock up measured active and reactive energy. The constant of pulse output 2 for active energy is 400imp/kWh (unconfigurable), its width is fixed at 100ms.

The default constant of configurable pulse output 1 is 400imp/kWh, default pulse width is 100ms.The configurable pulse output 1 can be set from the set-up menu.

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

Start-up Screens

1		The first screen lights up all display segments and can be used as a display check.
2		The second screen indicates the firmware installed in the unit and its build number. *The build number(1.302.2019) is for reference only. The actual build number changes according to product requirements.
3		The interface performs a self-test and indicates the result if the test passes.

After a short delay, the screen will display active energy measurements.

Measurements

The buttons operate as follows:

1		Selects the Voltage and Current display screens In Set-up Mode, this is the “Left” or “Back” button.
2		Select the Frequency and Power factor display screens In Set-up Mode, this is the “Up” button
3		Select the Power display screens In Set-up Mode, this is the “Down” button
4		Select the Energy display screens In Set-up mode, this is the “Enter” or “Right” button

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

Voltage and Current

Each successive pressing of the U/I button selects a new range:

1-1		Phase to neutral voltages(3p4w)
1-2		Phase to neutral voltages(3p3w)
2		Current on each phase
3-1		Phase to neutral voltage THD%(3p4w)
3-2		Phase to neutral voltage THD%(3p3w)

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

4		Current THD% for each phase

Frequency and Power Factor and Demand

Each successive pressing of the M button selects a new range:

1		Frequency and Power Factor (total)
2		Power Factor of each phase
3		Maximum Power Demand
4		Maximum Current Demand

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

Power

Each successive pressing of the P button select a new range:

1		Instantaneous Active Power in kW
2		Instantaneous Reactive Power in kVAr
3		Instantaneous Volt-amps in KVA
4		Total kW, kVAr, kVA

Energy Measurements

Each successive pressing of the E button selects a new range:

1-1		Imported active energy in kWh

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

1-2		Exported active energy in kWh
2-1		Imported reactive energy in kVArh
2-2		Exported reactive energy in kVArh
3-1		Total active energy in kWh
3-2		Total reactive energy in kVArh

Set-up

To enter set-up mode, pressing the  button for 3 seconds, until the password screen appears.

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn



Setting up is password-protected so you must enter the correct password (default '1000') before processing. If an incorrect password is entered, the display will show: PASS Err



To exit setting-up mode, press U/I ESC repeatedly until the measurement screen is restored.

Set-up Entry Methods

Some menu items, such as password, require a four-digit number entry while others, such as supply system, require selection from a number of menu options.

Menu Option Selection

1) Use the M and P buttons to select the required item from the menu. Selection does not roll over between bottom and top of list.

2) Press E to confirm your selection.

3) If an item flashes, then it can be adjusted by the M and P buttons. If not, there maybe a further layer.

4) Having selected an option from the current layer, press E to confirm your selection.

5) Having completed a parameter setting, press U/I ESC to return to a higher menu level. You will be able to use the M and P buttons for further menu selection.

6) On completion of all set-up, press U/I ESC repeatedly until the measurement screen is restored.

Number Entry Procedure

When setting up the unit, some screens require the entering of a number. In particular, on entry to the

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

setting up section, a password must be entered. Digits are set individually, from left to right. The procedure is as follows:

1) The current digit to be set flashes and is set using the M and P buttons.

2) Press E to confirm each digit setting.

3) After setting the last digit, press U/I ESC to exit the number setting routine.

Change Password

1		Use the M and P to choose the change password option.
2-1		Press the E to enter the change password routine. The new password screen will appear with the first digit flashing.
2-2		Use M and P to set the first digit and press E to confirm your selection. The next digit will flash.
2-3		Repeat the procedure for the remaining three digits

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

2-4		After setting the last digit, press the E button for more than 3s to confirm the final setting.
Press U/I ESC to exit the number setting routine and return to the Set-up menu.		

DIT Demand Integration Time

This sets the period in minutes over which the current and power readings are integrated for maximum demand measurement. The options are: 0, 5, 8, 10, 15, 20, 30, 60 minutes

1		From the set-up menu, use M and P buttons to select the DIT option. The screen will show the currently selected integration time.
2-1		Press E to enter the selection routine. The current time interval will flash.
2-2		Use M and P buttons to select the time required.
2-3		Press E to confirm the selection. Press U/I ESC to exit the DIT selection routine and return to the menu.

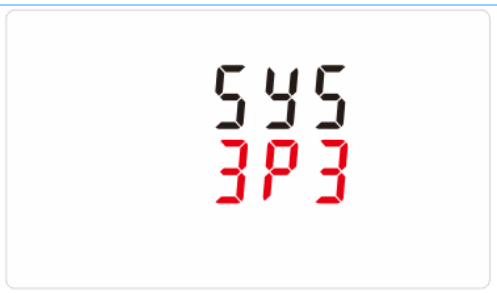
2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

Backlit Set-up

1		The backlit lasting time is settable. Default lasting time is 60minutes. For example, if it's set as 5, the backlit will be off in 5minutes from the last time operation on the meter.
2		Press E to enter the selection routine. The current time interval will flash **The options can be:** **0(always on),5,10,30,60,120minutes**
Use M and P buttons to select the time interval. Press E to confirm the set-up.		

Supply System

Use this section to set the type of electrical system.

1		From the Set-up menu, use M and P buttons to select the System option. The screen will show the currently selected system type.
2-1		Press E to enter the selection routine. The current selection will flash
2-2		Use M and P buttons to select the required system option: 1P2(W),3P3(W) ,3P4(W)

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

2-3		Press E to confirm the selection. SET indicator will appear.

Press U/I ESC to exit the system selection routine and return to the menu. You will be returned to the main Set-up Menu.

Pulse Output

This option allows you to configure the pulse output 1. The output can be set to provide a pulse for a defined amount of energy active or reactive.

Use this section to set up the pulse output for:

Total kWh/ Total kVArh

Import kWh/Export kWh

Import KVArh/Export KVArh

1		From the Set-up menu, use M and P buttons to select the Pulse output option.
2-1		Press E to enter the selection routine. The unit symbol will flash.
2-2		Use M and P buttons to choose the selection .

Press E to confirm the setting and press U/I ESC to return to the main set up menu.

Pulse Rate

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

Use this to set the energy represented by each pulse. Rate can be set to 1 pulse per dFt/0.01/0.1/1/10/100kWh/kVArh.



(It shows 1 pulse = 10kWh/kVArh)

1		From the Set-up menu, use M and P buttons to select the Pulse Rate option.
2		Press E to enter the selection routine. The current setting will flash. Note: When it's dFt, it means 2.5Wh/VArh
Use M and P buttons to choose pulse rate. On completion of the entry procedure, press E to confirm the setting and press U/I ESC to return to the main set up menu.		

Pulse Duration

The energy monitored can be active or reactive and the pulse width can be selected as 200, 100(default) or 60ms.



(It shows pulse width of 200ms)

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

1-1		From the Set-up menu, use M and P buttons to select the Pulse width option.
1-2		Press E to enter the selection routine. The current setting will flash.
Use M and P buttons to choose pulse width. On Completion of the entry procedure, press E to confirm the setting and press U/I ESC to return to the main set -up menu.		

Communication

There is a RS485 port can be used for communication using Modbus RTU protocol. For Modbus RTU, parameters are selected from Front panel.

RS485 Address



(The range is from 001 to 247)

1		From the Set-up menu, use M and P buttons to select the Address ID.

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

2-1		Press E button to enter the selection routine. The current setting will be flashing.
2-2		Use M and P buttons to choose Modbus Address(001 to 247)
On completion of the entry procedure, press E button to confirm the setting and press U/I ESC button to return the main set-up menu.		

Baud Rate

1		From the Set-up menu, use M and P buttons to select the Baud Rate option.
2-1		Press E to enter the selection routine. The current setting will flash.
2-2		Use M and P buttons to choose Baud rate 2.4k. 4.8k, 9.6k, 19.2k, 38.4k
On completion of the entry procedure, press E to confirm the setting and press U/I ESC to return to the main set-up menu.		

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

Parity

1		From the Set-up menu, use M and P buttons to select the Parity option.
2-1		Press E to enter the selection routine. The current setting will flash.
2-2		Use M and P buttons to choose Parity (EVEN / ODD / NONE)
On Completion of the entry procedure, press E to confirm the setting and press U/I ESC to return to the main set-up menu.		

Stop Bits

1		From the Set-up menu, use M and P buttons to select the Stop Bit option.
2-1		Press E to enter the selection routine. The current setting will flash.

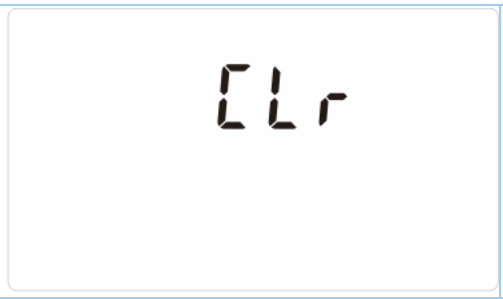
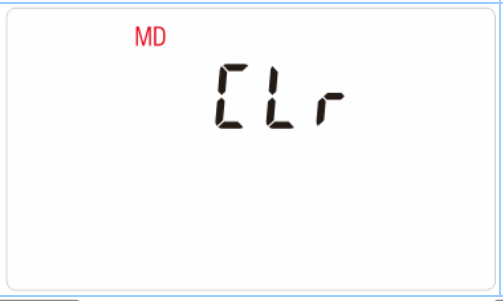
2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

2-2		Use M and P buttons to choose Stop Bit (2 or 1)
On completion of the entry procedure, press E to confirm the setting and press U/I to return to the main set up menu.		

Note: **Default is 1, and only when the parity is NONE that the stop bit can be changed to 2.**

CLR

The meter provides a function to reset the maximum demand value of current and power.

1		From the Set-up menu, use M and P buttons to select the reset option.
2		Press E to enter the selection routine. The MD will flash.
Press E to confirm the setting and press U/I to return to the main set up menu.		

Specifications

Measured Parameters

The unit can monitor and display the following parameters of a single phase two wire(1p2w), three phase three wire(3p3w) or four phase four wire(3p4w) supply.

Voltage and Current

Phase to neutral voltages 100 to 276V a.c. (not for 3p3w supplies)
Voltages between phases 173 to 480V a.c. (3p supplies only)
Percentage total voltage harmonic distortion (THD%) for each phase to N (not for 3p3w supplies)
Percentage voltage THD% between phases (three phase supplies only)
Current THD% for each phase

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

Power Factor and Frequency and Max. Demand

Frequency in Hz
Instantaneous power:
Power 0 to 99999 W
Reactive Power 0 to 99999 VAr
Volt-amps 0 to 99999 VA
Maximum demanded power since last Demand reset Power factor
Maximum neutral demand current, since the last Demand reset (for 3p4w supply only)

Energy Measurements

- Imported active energy 0 to 999999.99 kWh
- Exported active energy 0 to 999999.99 kWh
- Imported reactive energy 0 to 999999.99 kVArh
- Exported reactive energy 0 to 999999.99 kVArh
- Total active energy 0 to 999999.99 kWh
- Total reactive energy 0 to 999999.99 kVArh

Measured Inputs

Voltage inputs through 4-way fixed connector with 25mm^2 stranded wire capacity. single phase two wire(1p2w), three phase three wire(3p3w) or four phase four wire(3p4w) unbalanced. Line frequency measured from L1 voltage or L3 voltage.

Accuracy

- Voltage 0·5% of range maximum
- Current 0·5% of nominal
- Frequency 0·2% of mid-frequency
- Power factor 1% of unity (0.01)
- Active power (W) ±1% of range maximum
- Reactive power (VAr) ±1% of range maximum
- Apparent power (VA) ±1% of range maximum
- Active energy (Wh) Class 1 IEC 62053-21
  Class B EN50470-1/3
- Reactive energy (VArh) Class 2 IEC 62053-23
- Response time to step input 1s, typical, to >99% of final reading, at 50 Hz.

Interfaces for External Monitoring

Three interfaces are provided:

- RS485 communication channel that via protocol remotely.
- Pulse output(Pulse 1) indicating real-time measured energy.(configurable)
- an Pulse output(Pulse 2) 400imp/kWh(non-configurable)

The Modbus configuration (Baud rate etc.) and the pulse output assignments (kW/kVArh, import/export etc.) are configured through the Set-up screens.

Pulse Output

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

The unit provides two pulse outputs. Both pulse outputs are passive type.
Pulse output 1 is configurable. The pulse output can be set to generate pulses to represent total / import/export kWh or kVarh.
The pulse constant can be set to generate 1 pulse per:
dFt = 2.5 Wh/VArh
0.01 = 10 Wh/VArh
0.1 = 100 Wh/VArh
1 = 1 kWh/kVArh
10 = 10 kWh/kVArh
100 = 100 kWh/kVArh
Pulse width: 200/100/60ms
Pulse output 2 is non-configurable. It is fixed up with active kWh. The constant is 400imp/kWh.

RS485 Output for Modbus RTU

For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu:

Baud rate 2400, 4800, 9600, 19200, 38400

Parity none (default)/odd/even

Stop bits 1 or 2

RS485 network address *nnn* – 3-digit number, 001 to 247

Modbus™ Word order Hi/Lo byte order is set automatically to normal or reverse. It cannot be configured from the set-up menu.

Reference Conditions of Influence Quantities

Influence Quantities are variables that affect measurement errors to a minor degree. Accuracy is verified under nominal value (within the specified tolerance) of these conditions.

- Ambient temperature 23°C ±1°C
- Input frequency 50Hz(MID)
  50 or 60Hz ±2%(non-MID)
- Input waveform Sinusoidal (distortion factor < 0·005)
- Magnetic field of external origin Terrestrial flux

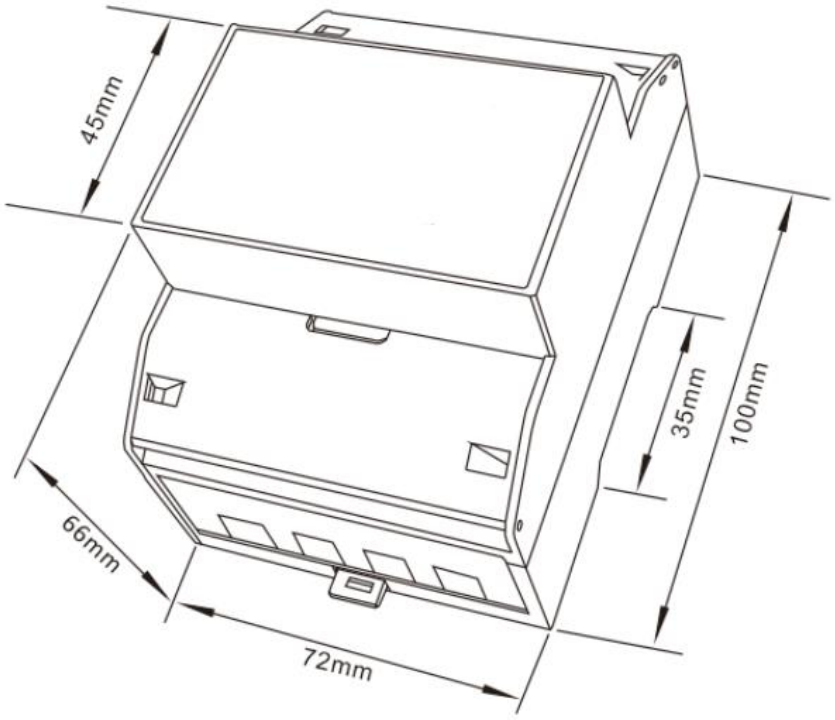
Environment

- Operating temperature -25°C to +55°C*
- Storage temperature -40°C to +70°C*
- Relative humidity 0 to 90%, non-condensing
- Altitude Up to 2000m
- Warm up time 5S
- Vibration 10Hz to 50Hz, IEC 60068-2-6, 2g
- Shock 30g in 3 planes

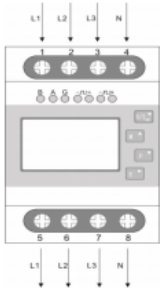
*** Maximum operating and storage temperatures are in the context of typical daily and seasonal variation.**

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

Dimensions



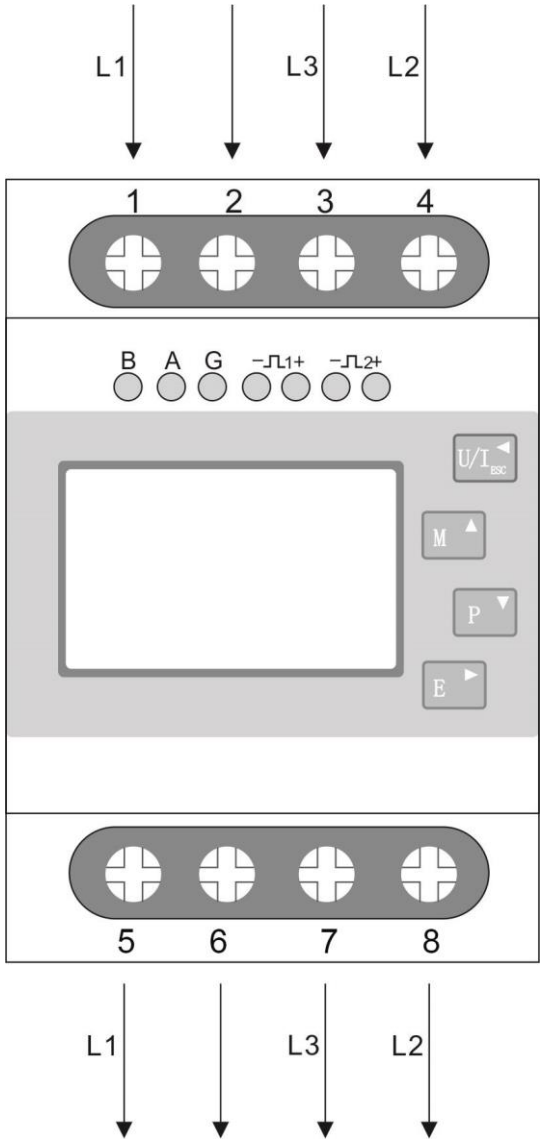
Wiring Guide

Terminal ①②③④ ⑤⑥⑦⑧		Measurement Connection	Screw Connection	
		Strip Length	14-15mm	
		Screw	M5	
		Rigid/supple	4-25mm²	
		Tightening torque	2.5Nm	
		Model	PZ2	
Terminal B A G		Measurement Connection	Screw Connection	
		Strip Length	6-7mm	
		Fixed/flexible (Wire Range)	0.5-1.5mm² (22~14 AWG)	
		Tightening torque	0.2Nm	
		Model	PZ0	

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

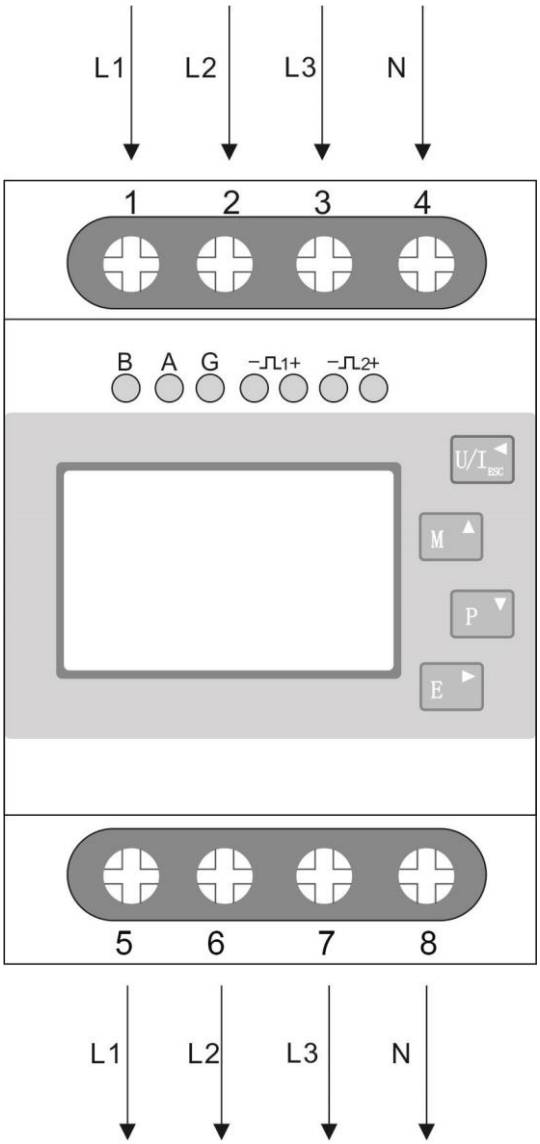
Wiring diagram

- Three Phase Three Wires：



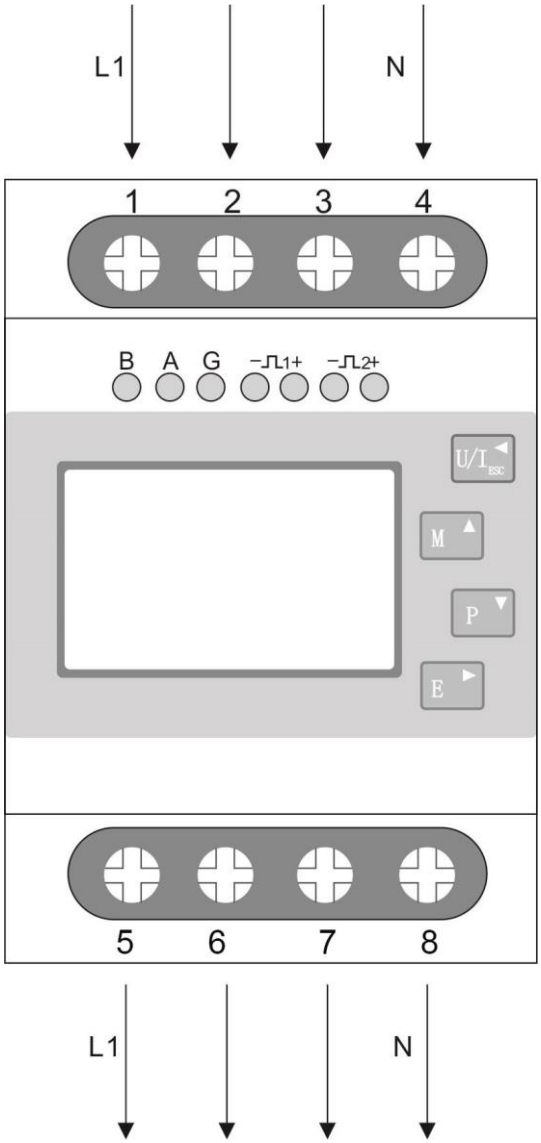
2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

- Three Phase Four Wires：



2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn

- Single Phase two Wires：



IF you have any question, please feel free to contact our sales team.

Zhejiang Eastron Electronic Co., Ltd.
No.1369, Chengnan Rd. Jiaxing, Zhejiang, 314001, China
Tel: +86-573-83698881 Fax: +86-573-83698883
Email: sales@eastrongroup.com
www.eastrongroup.com

2020 EASTRON ELECTRONIC. ALL RIGHTS RESERVED. Web: www.eastron.com.cn